



Windows & Doors

STANDARD WINDOWS

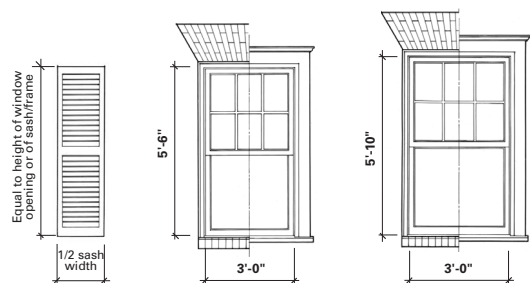


Second floor

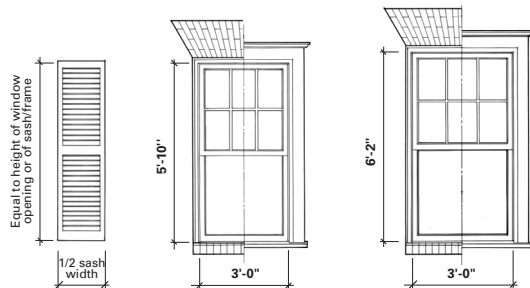


First floor


SPECIAL WINDOWS

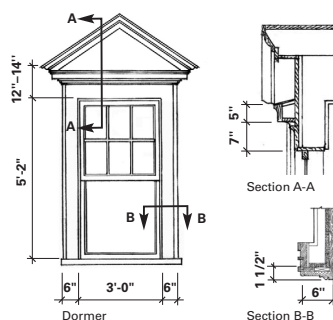


Dormer

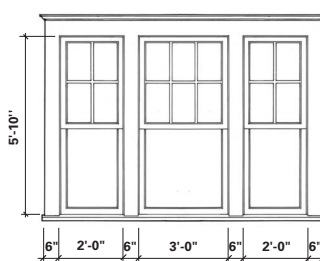

Triple window

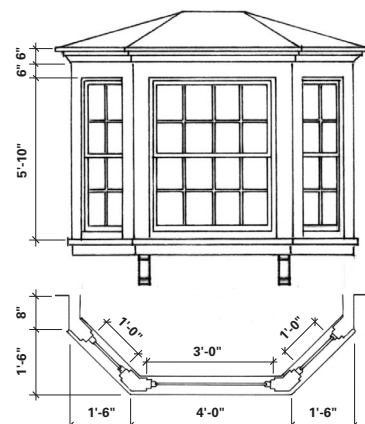

Angled bay window

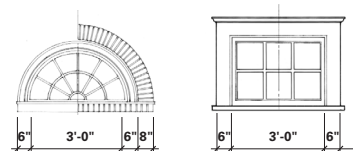

Accent windows

Standard Windows

Windows have vertical proportions. Window muntin patterns are typically 6 over 1 or 6 over 6 on both floors; window panes are more vertical in proportion than square. Standard windows are double hung. Jack arches are common over windows set in masonry walls. Standard windows are often paired.

Special Windows

Special windows include angled bay windows, triple windows and dormers with a pediment. Bay windows should extend to the ground whenever possible, otherwise bay windows supported on heavy brackets are acceptable. Small square, rectangular or fan light windows are often used as an accent in gable ends or on the second floor above the entrance.

Shutters

Shutters are encouraged. If shutters are installed, they should be sized and mounted as if operable.


Doors

Doors typically have six panels, while surrounds frequently incorporate sidelights and transoms.

Trim

Windows and doors typically have a 6-inch-wide flat trim with or without a cap molding, or a 6-inch backband trim. Brick buildings feature 2-inch brickmold.

DETAIL WINDOW SECTIONS

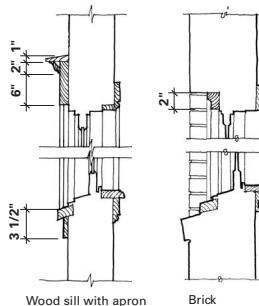

Wood sill with apron

Brick



DOORS

